



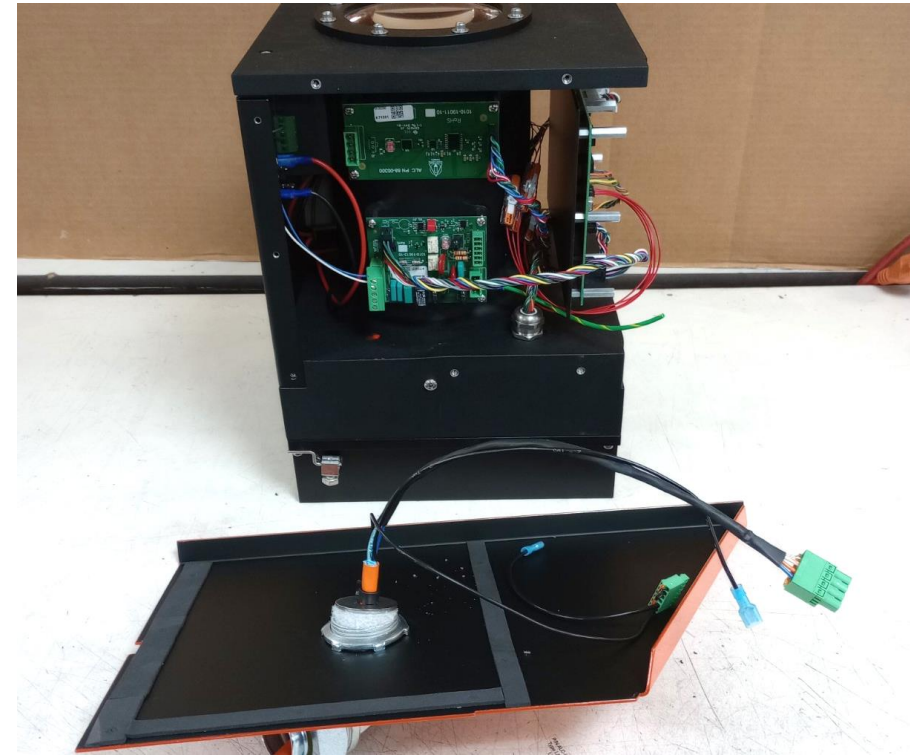


LED PAPI Style B DC-DC Converter Kit P/N: 88-00825 Installation Manual

REVISION 0.0

➤ Remove the top & side covers to access the Power Supply Tray (ALC P/N: 88-01200)


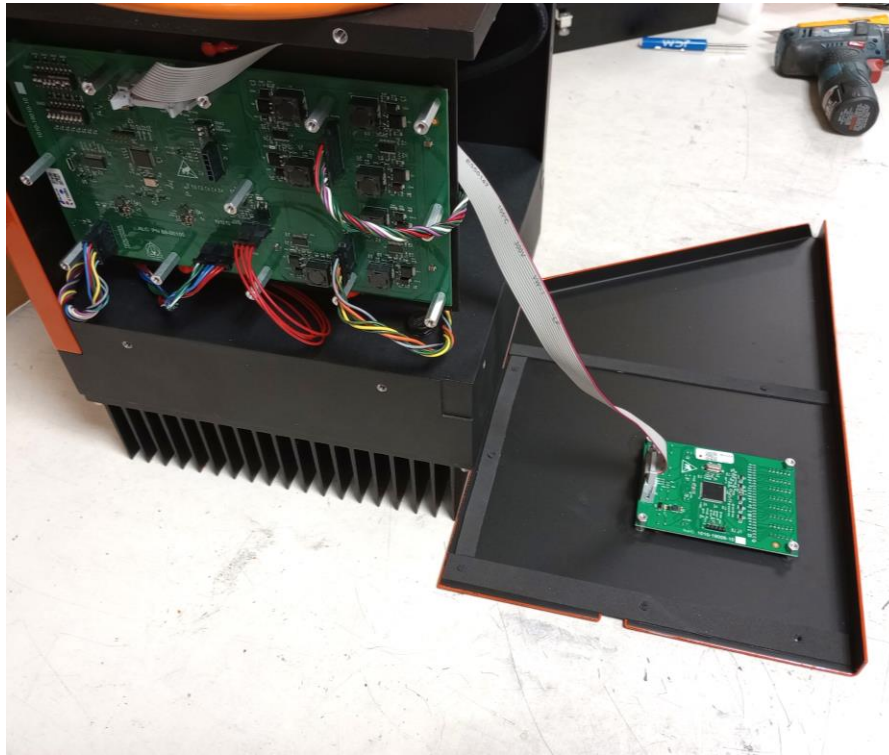


- Unplug the Power Supply Tray from the 88-00400 PCB
- Remove the Power Supply Tray

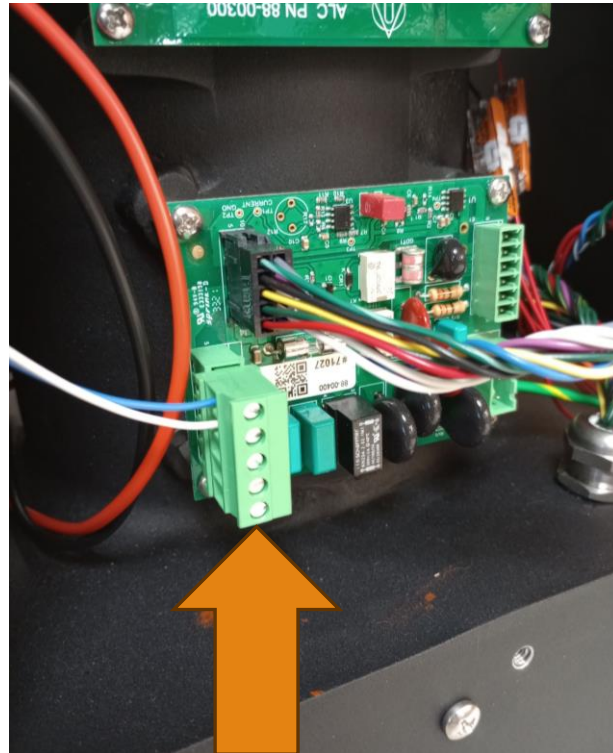


- Remove the red liner from the VHB tape on the 88-00825
- Using the pink foam from its packaging as a spacer, position the 24DC-PWRCON as close to the bottom lip and 44-00175 as possible, oriented as shown
- Connect the 24DC-PWRCON to the 44-00175

- Discard the pink foam and apply pressure to the 24DC-PWRCON
- Do not apply *too* much force – be careful not to crack the case

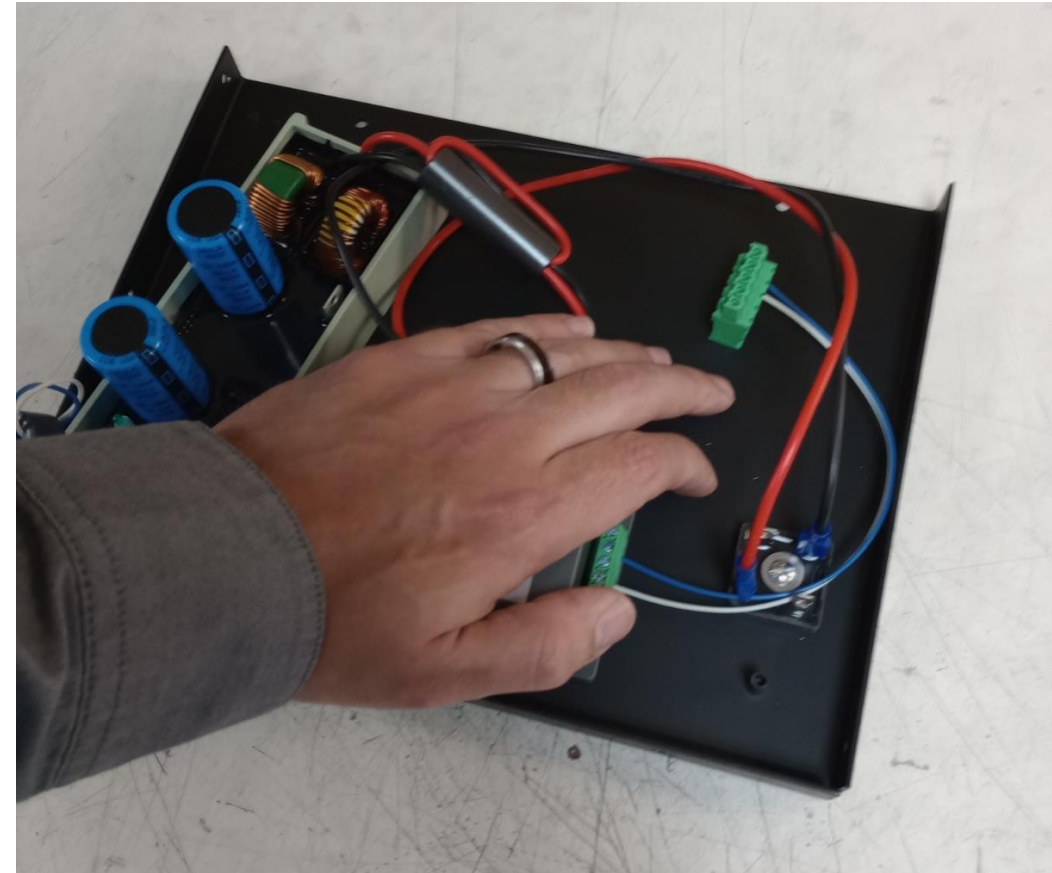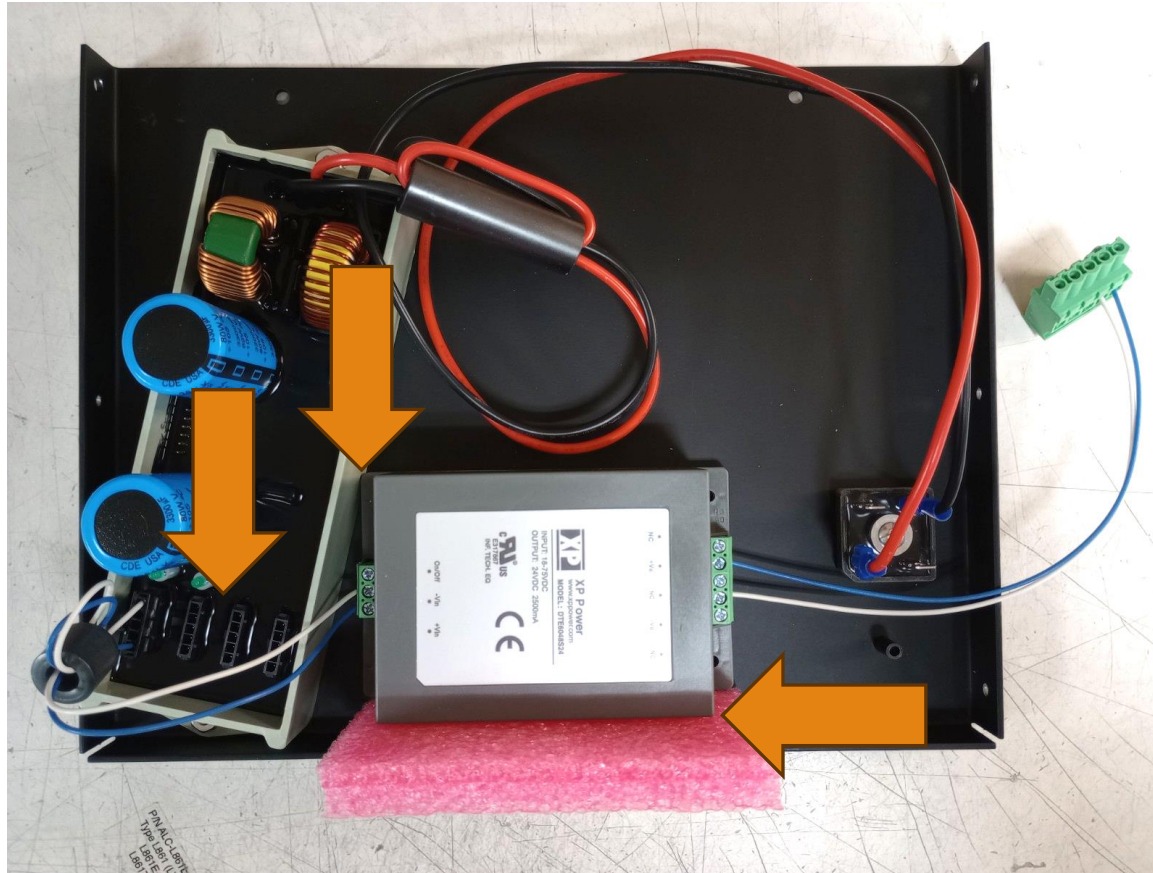

- Re-attach the Power Supply Tray
- Plug it back in to the 88-00400 PCB

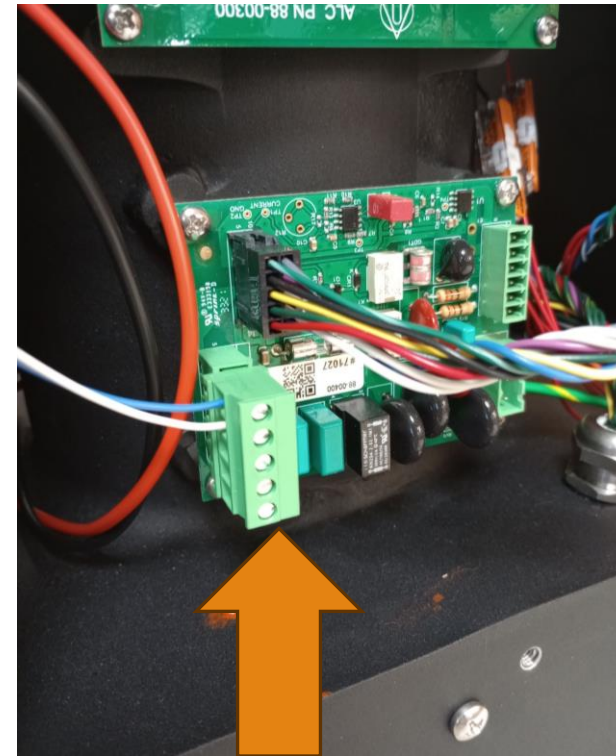

➤ Re-attach all covers

