

Airport**Lighting**Company  
An ISO 9001:2015 Certified Company

# OWNER'S MANUAL



**High Intensity LED Runway Light**  
**L-862(L), L-862E(L) LED**





Airport**Lighting**Company

An ISO 9001:2015 Certified Company

# Elevated High Intensity L-862(L), L862E(L) LED LED Runway Light Owner's Manual

**In accordance with:**

**FAA**

**Advisory Circular AC-150/5345-46  
Engineering Brief 67**

**ICAO Annex 14**

**Transport Canada TP312**



**Manufactured by:**

**Airport Lighting Company**

108 Fairgrounds Drive  
Manlius, New York 13104  
(315) 682-6460

Email: [info@airportlightingcompany.com](mailto:info@airportlightingcompany.com)

Website: [www.airportlightingcompany.com](http://www.airportlightingcompany.com)



## L-862(L), L-862E(L) High Intensity LED Light



### Compliances

FAA: L-862(L) and L-862E(L) AC 150/5345-46 and Engineering Brief No. 67 (Current Edition)

Canada: TP 312

ICAO: Annex 14, Volume 1



Intertek

### Applications

Runway Edge, Threshold, Displaced Threshold, Threshold/End, Displaced Threshold Precision IFR Runways

### Key Features

- Long Life LEDs for over 56,000 hours of service
- Light clarity ensured for years with glass lens.
- Dimmable to FAA intensity curve from 2.8 amp to 6.6 amps
- Plug and Know circuit design. Dynamic controller senses the attached light engines, allowing for greater service flexibility.
- Daytime recognition provided on lens retainers
- Leveling surface and sighting cross on cap eliminates the need for an aiming device
- Fixture surface area designed to meet LED thermal requirements

### General Catalog Numbers

EHL-□□-□□-□

#### Side A

W = White  
Y = Yellow  
R = Red  
G = Green  
O = Opaque

#### Side B

W = White  
Y = Yellow  
R = Red  
G = Green  
O = Opaque

#### Mounting Height

14 = 14"  
20 = 20"  
24 = 24"  
30 = 30"

#### Options

5 = Arctic Kit

*Example: EHL-RG-24 is 24" high with Red on Side A and Green on Side B.*




## Specifications

### Dimensions & Weight

|                        |            |
|------------------------|------------|
| Height, head assembly  | 6.8 inches |
| Height, w/ slip fitter | 8.9 inches |
| Width                  | 5.5 inches |
| Length                 | 5.2 inches |
| Weight                 | 7.2 pounds |

The L862 fixtures ship in a single box (9 1/8 x 5 3/4 x 7) or in a case of 18 (18 x 17 x 16).

View runway edge lights from runway centerline perpendicular to fixture when determining color in conjunction with right-hand and left-hand fixtures. The first color will be on the left toe-in side of the light fixture.

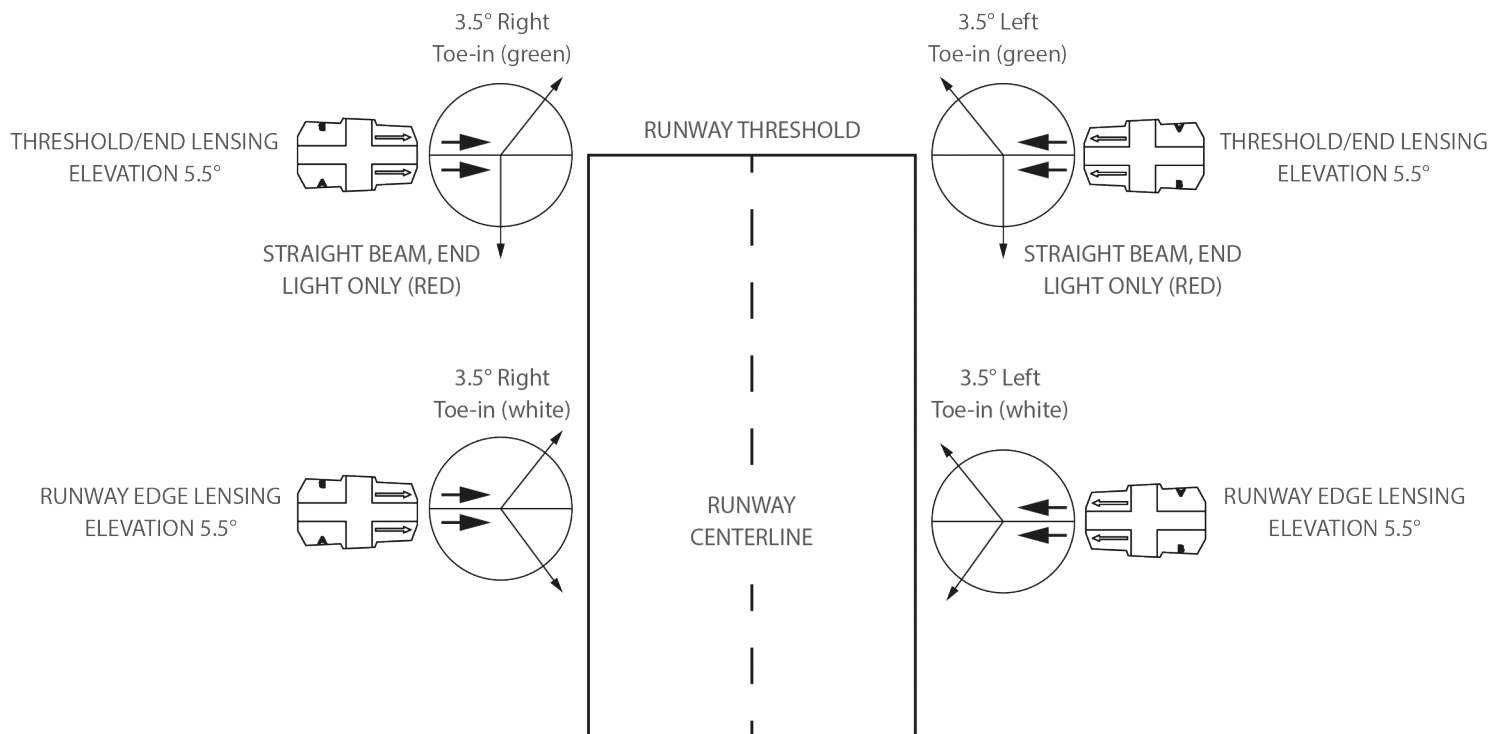

# TABLE OF CONTENTS



Airport**Lighting**Company

An ISO 9001:2015 Certified Company

|                                        |           |
|----------------------------------------|-----------|
| <b>How to Get Help</b>                 | <b>1</b>  |
| <b>Warranty</b>                        | <b>2</b>  |
| <b>Safety</b>                          | <b>3</b>  |
| <b>Description</b>                     | <b>4</b>  |
| Catalog Ordering Information           | 4         |
| L862 Fixtures                          | 4         |
| L862E Fixtures                         | 5         |
| ICAO / TP312 Fixtures                  | 6         |
| Fixture Loads                          | 7         |
| Dimensions                             | 7         |
| Storage                                | 7         |
| <b>Installation</b>                    | <b>8</b>  |
| FAA References and Siting Requirements | 8         |
| Installation                           | 8         |
| Tools Required for Installation        | 8         |
| Tools Required for Maintenance         | 8         |
| Installation Precautions               | 8         |
| Install Proper Transformer             | 8         |
| Install Fixture                        | 9         |
| Install Frangible Coupling             | 9         |
| Aim Fixture                            | 9         |
| Level Fixture                          | 10        |
| Torque Bolts                           | 10        |
| <b>Operation</b>                       | <b>11</b> |
| Plug and Know LED Circuit              | 11        |
| Multiple Light Devices                 | 11        |
| Arctic Kit                             | 11        |
| <b>Maintenance</b>                     | <b>12</b> |
| Daily Maintenance                      | 12        |
| Monthly Maintenance                    | 12        |

# TABLE OF CONTENTS



Airport**Lighting**Company

An ISO 9001:2015 Certified Company

|                                          |              |
|------------------------------------------|--------------|
| <b>Troubleshooting</b>                   | <b>13</b>    |
| Tech Support                             | <b>13</b>    |
| Replacing Electronic Parts               | <b>14-15</b> |
| Replacing Lens, Gasket, and Light Engine | <b>16</b>    |
| <b>Parts</b>                             | <b>17-20</b> |
| <b>Wiring Diagrams</b>                   | <b>21-23</b> |
| <b>Notes</b>                             | <b>24</b>    |

## List of Figures

|                                                              |           |
|--------------------------------------------------------------|-----------|
| Figure 1: <b>Light Placement</b>                             | <b>4</b>  |
| Figure 2: <b>Side A, Side B</b>                              | <b>5</b>  |
| Figure 3: <b>Fixture Dimensions</b>                          | <b>7</b>  |
| Figure 4: <b>Fixture Aiming</b>                              | <b>9</b>  |
| Figure 5: <b>Leveling, Front View</b>                        | <b>10</b> |
| Figure 6: <b>Leveling, Side View</b>                         | <b>10</b> |
| Figure 7: <b>Electronic Component Assembly</b>               | <b>14</b> |
| Figure 8: <b>How to Remove Ferrule</b>                       | <b>15</b> |
| Figure 9: <b>Lens Assembly</b>                               | <b>16</b> |
| Figure 10: <b>Parts Diagram</b>                              | <b>18</b> |
| Figure 11: <b>Arctic Kit Parts</b>                           | <b>19</b> |
| Figure 12: <b>Schematic, Bi-directional Fixture</b>          | <b>22</b> |
| Figure 13: <b>Schematic, Bi-directional Arctic Kit</b>       | <b>23</b> |
| Figure 14: <b>Schematic, Uni-directional Arctic Kit</b>      | <b>24</b> |
| Figure 15: <b>Schematic, Uni-directional with Arctic Kit</b> | <b>25</b> |

## List of Tables

|                                              |           |
|----------------------------------------------|-----------|
| Table 1: <b>PF and VA</b>                    | <b>7</b>  |
| Table 2: <b>Torque</b>                       | <b>10</b> |
| Table 3: <b>Troubleshooting</b>              | <b>13</b> |
| Table 4: <b>Light Engines</b>                | <b>17</b> |
| Table 5: <b>Columns and Cords</b>            | <b>17</b> |
| Table 6: <b>Bill of Materials</b>            | <b>20</b> |
| Table 7: <b>Arctic Kit Bill of Materials</b> | <b>21</b> |



## HOW TO GET HELP



Airport**Lighting**Company

An ISO 9001:2015 Certified Company

# Have Questions? Contact Us:



**PHONE:**

**(315) 682-6460**




**EMAIL:**

**info@airportlightingcompany.com**



**WEBSITE:**

**www.airportlightingcompany.com**

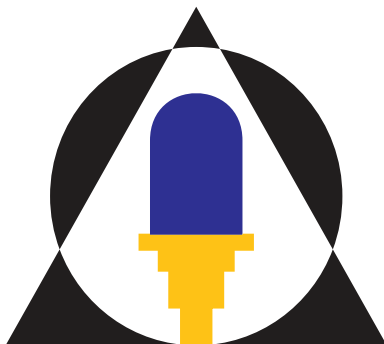

Airport**Lighting**Company

An ISO 9001:2015 Certified Company

**108 Fairgrounds Drive  
Manlius, New York 13104**



## Statement of Warranty

Products manufactured by Airport Lighting Company (ALC) which use LEDs as a light source are warranted against mechanical and physical defects in design or manufacture for a period of 2 years from date of installation per the applicable FAA Advisory Circular and against electrical defects in design or manufacture of the LED or LED specific circuitry for a period of 4 years per FAA EB67D. ALC will correct such defects by repair or replacement, at its option, provided the products have been properly handled and stored prior to installation, properly installed and operated after installation, and provided further that the Buyer has notified ALC in writing within the warranty period and within a reasonable time after notice of such defects. Refer to handling, storage, installation and operational instructions for proper procedural guidance that must be followed to maintain warranty provisions.

This warranty is in effect for the specified term as long as the equipment, in ALC's judgment, has not been altered in such a way as to affect the equipment adversely, subject to accident, negligence, improper storage, and has been operated and maintained in accordance with accepted FAA guidelines as described in AC 150/5340-26 and ALC's published operational guidelines.

ALC reserves the right to examine products about which a claim has been made. Equipment must be presented in the same condition as when the defect was discovered. ALC also reserves the right to require the return of equipment to establish any claim.

**Disclaimer:** ALC's obligation under this warranty is limited to repair or replacement of defective equipment sold by ALC at no cost to Buyer. This does not include any other costs such as the cost of removal, shipping, or installation of the defective part or repaired or replaced product, including labor or any consequential damages of any kind. Warranty services provided under this agreement do not assure uninterrupted operations of LED illuminated equipment. ALC shall not be liable for any indirect or consequential damages.

ALC's liability under no circumstances will exceed its sales price of the products claimed to be defective. All transportation costs under this warranty are the responsibility of the purchaser. Replacement parts and/or equipment provided under this warranty are covered under the same terms until the expiration of the original warranty period that began upon the first installation of the equipment.

This is ALC's sole and exclusive warranty with respect to the equipment sold to the Buyer. There are no express or implied warranties of fitness for any particular purpose or any implied warranties other than those made expressly herein.

ALC shall not be liable to the purchaser of this product or third parties for indirect or consequential damages, or for damages arising from the use of any options or parts other than those designated by ALC as approved products. Damage caused by lightning, flood and other natural or manmade causes are outside the scope of this warranty.





## Safety

It is not safe to work on a constant current power system when the power is on. Make sure the power is off before installing a runway light fixture. A lock out, tag out, procedure should be used. An additional safety measure is to test that the circuit is off by using a clamp-on ammeter. By using a clamp-on ammeter, clamped over the primary cable of the isolation transformer, the installer can confirm that the circuit being worked on is off by verifying that no current is flowing thru the primary cable.





# DESCRIPTION



AirportLightingCompany

An ISO 9001:2015 Certified Company

## Description

The High Intensity LED Runway Lights are elevated bi-directional and uni-directional runway lights. The High Intensity LED Runway Light operate on a 2.8 - 6.6 Amp series runway circuit.

**FAA:** This product line meets the requirements for L862 and L862E

**ICAO:** This product line meets the standards as shown Appendix 2, A2-3 (green threshold light), A2-8 (red runway end light), and A2-10 (white, yellow and red runway edge light where width of runway is 60m).

**TP312:** This product line meets the standards as shown in Appendix B.1.3 (green threshold light), B.1.9.3 (red runway end light), and B.1.11 (white, yellow and red runway edge light where width of runway is 60m).

## Catalog Ordering Information

### L-862(L) Fixtures

EHL-    -    -  

Color
Height
Options

| Color               | Height                  | Options        |
|---------------------|-------------------------|----------------|
| WW = White / White  | 14 = 14" (36cm)         | 5 = Arctic Kit |
| WY = White / Yellow | 20 = 20" (51cm)         |                |
| YW = Yellow / White | 24 = 24" (61cm)         |                |
| WR = White / Red    | 30 = 30" (76cm)         |                |
| RW = Red / White    | Other heights available |                |
| GY = Green / Yellow |                         |                |
| YG = Yellow / Green |                         |                |
| RY = Red / Yellow   |                         |                |
| YR = Yellow / Red   |                         |                |

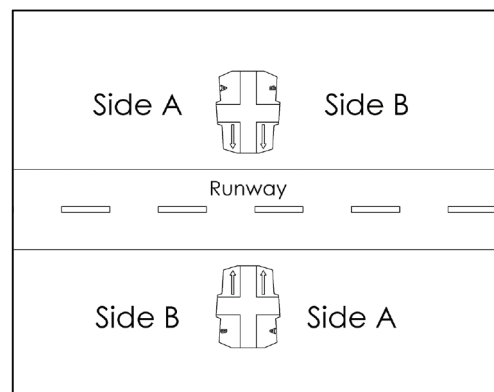


Figure 1: Light Placement

**Example:** EHL-WY-24 is 24" high fixture with white on side A and yellow on side B.



# DESCRIPTION



AirportLightingCompany

An ISO 9001:2015 Certified Company

## Catalog Ordering Information Continued

### L-862E(L) Fixtures

EHL-  -  - 

Color                      Height                      Options

| Color                | Height                  | Options        |
|----------------------|-------------------------|----------------|
| RR = Red / Red       | 14 = 14" (36cm)         | 5 = Arctic Kit |
| RG = Red / Green     | 20 = 20" (51cm)         |                |
| GR = Green / Red     | 24 = 24" (61cm)         |                |
| RO = Red / Obscure   | 30 = 30" (76cm)         |                |
| OR = Obscure / Red   | Other heights available |                |
| GO = Green / Obscure |                         |                |
| OG = Obscure / Green |                         |                |

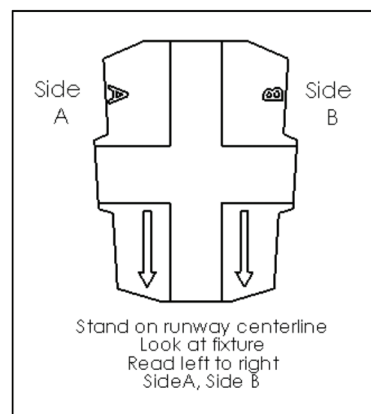


Figure 2: Side A, Side B

**Example:** EHL-RG-24 is 24" high with red on side A and green on side B.



# DESCRIPTION



AirportLightingCompany

An ISO 9001:2015 Certified Company

## Catalog Ordering Information Continued

### ICAO / TP312 Fixtures

EHL-□□-□□-□

□
□
□
□

Color
Height
Options

| Color                           | Height                  | Options        |
|---------------------------------|-------------------------|----------------|
| WW = White / White              | 14 = 14" (36cm)         | 5 = Arctic Kit |
| WY = White / Yellow             | 20 = 20" (51cm)         |                |
| YW = Yellow / White             | 24 = 24" (61cm)         |                |
| WR = White / Red                | 30 = 30" (76cm)         |                |
| RW = Red / White                | Other heights available |                |
| RY = Red / Yellow               |                         |                |
| YR = Yellow / Red               |                         |                |
| RR = Red/Red                    |                         |                |
| RO = Red / Obscure              |                         |                |
| OR = Obscure / Red              |                         |                |
| IO = Green Threshold / Obscure* |                         |                |
| OI = Obscure / Green Threshold* |                         |                |

**\*I = Green Threshold for ICAO and TP312**

**Example:** EHL-IO-24 is 24" high uni-directional fixture with green on side A.

**White, Yellow and Red (W, Y, R)** meet the runway light requirements for a runway 60m wide as stated in Annex 14, Appendix 2, A2-10 and TP312, Appendix B.1.11.

**Red (R)** meets the requirement for a runway end light as stated in Annex 14, Appendix 2, A2-8 and TP312, Appendix B.1.9.3

**Green (I)** meets the requirements for a threshold light as stated in Annex 14, Appendix 2, A2-3 and TP312, Appendix B.1.3.

**Note:** G represents a green light engine that does **NOT** meet ICAO or TP312 specifications. The green ICAO and TP312 threshold light must designated as I when ordering a fixture.



# DESCRIPTION



AirportLightingCompany

An ISO 9001:2015 Certified Company

## Fixture Loads

**Table 1: PF and VA**

|                           | Fixture Load | Iso Tran Load | VA   | PF   |
|---------------------------|--------------|---------------|------|------|
| WW                        | 44.8         | 13.5          | 58.3 | 0.95 |
| WW arctic kit             | 58.8         | 10.6          | 69.4 | 0.98 |
| Green unidirectional (GO) | 24.4         | 14.3          | 38.7 | 0.96 |
| GO arctic kit             | 31.4         | 11.1          | 42.5 | 0.97 |

## Dimensions

**Height, head assembly:** 6.8 inches, (173mm)

**Height, w/ slip fitter:** 8.9 inches, (226mm)

**Width:** 5.5 inches, (140mm)

**Length:** 5.2 inches, (132mm)


**Weight:** 5 pounds, (2.3kg)

### Single Box

(9 1/8 x 5 3/4 x 7 inches) or (232 x 178 x 1468mm)

### 9 Fixtures in a Box

(17 x 16 1/2 x 10 inches) or (432 x 420 x 254mm)

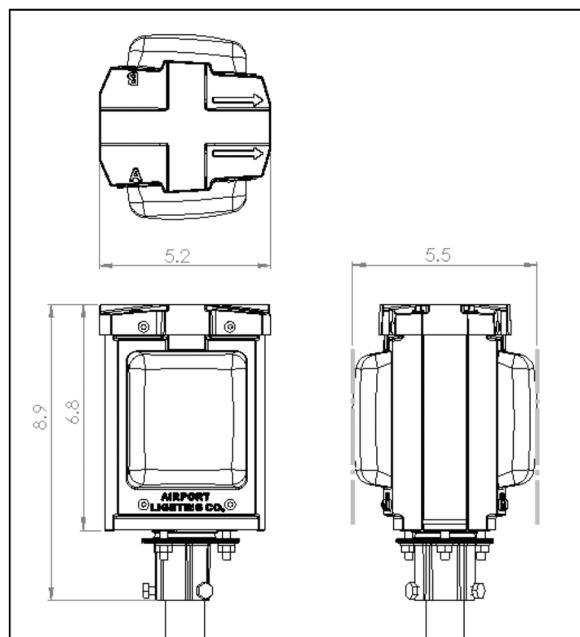

**Figure 3: Fixture Dimensions**

## Storage

The Elevated High Intensity fixtures should be stored indoors and kept dry.

**Storage Temperature:** -55C (-67F) to +55C (131F).



## FAA References and Siting Requirements

The requirements for siting of high intensity runway edge lights are explained in FAA advisory circular 150/5340-30J.

The L862E fixtures, bidirectional red/green and red/red, and unidirectional red or green will come with red and/or green lens retainers to provide daytime recognition.

## Installation

### Tools Required for Installation:

- 7/16 wrench
- 1 ½ inch wrench

### Tools Required for Maintenance:

- 7/16 wrench
- 1 ½ inch wrench
- Torx T20 driver

## Installation Precautions

It is not safe to work on a constant current power system when the power is on. Make sure the power is off before installing a light fixture. A Lock Out Tag Out procedure is strongly recommended. An additional safety measure is to test circuit by using a clamp on current meter. By clamping over the primary cable in the fixture can, the installer has performed an additional safety check by checking the circuit they are working on is off. At the vault make sure the Constant Current Regulator powering the circuit is off and has been tagged out. At the fixture, place a clamp-on ammeter over the primary cable and verify that the current measures zero amps.

## Install Proper Transformer

It is recommended to use the specified transformer to power the High Intensity LED Runway Light. A smaller transformer will not allow the fixture to work properly. An oversized transformer can be used but will not work as efficiently. A 30/45-Watt isolation transformer is specified for all fixtures without an arctic kit. All fixtures that have an optional arctic kit require a 65W isolation transformer.



## Install Fixture


Loosely install the column to the fixture and pass the secondary cable thru the column and frangible coupling. Connect the secondary to the transformer. Fasten the column to the frangible coupling with a torque of 64 inch-pounds (5.3 foot-pounds).

## Install Frangible Coupling

Install frangible coupling into baseplate and torque to 50 ft-lbs. (68Nm). For a 62-1060 coupling into a 2in NPS baseplate, connect the 62-1060 to a 2in to 1 1/2in reducer, then install the reducer and coupling into the baseplate with a torque of 50 ft-lbs. (68Nm).

## Aim Fixture

The arrows on the fixture cap should be pointed towards the runway centerline. The shorter cross on top of the cap is used to sight the fixture for alignment with the row of edge lights, the longer member of the cross can be used to align with the threshold lights.

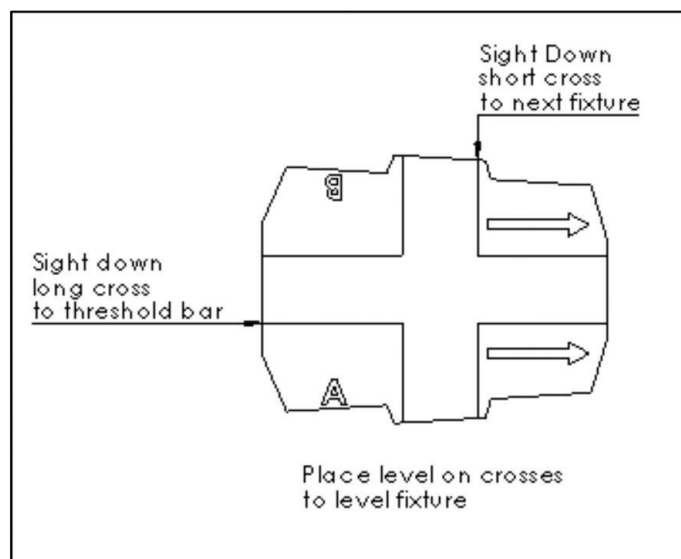

**Figure 4: Fixture Aiming**



## Level Fixture

Place a level on top of the cap and level the fixture. If a torpedo level is used, level in both directions of the cross. A bull's eye level can be used at the cross intersection.

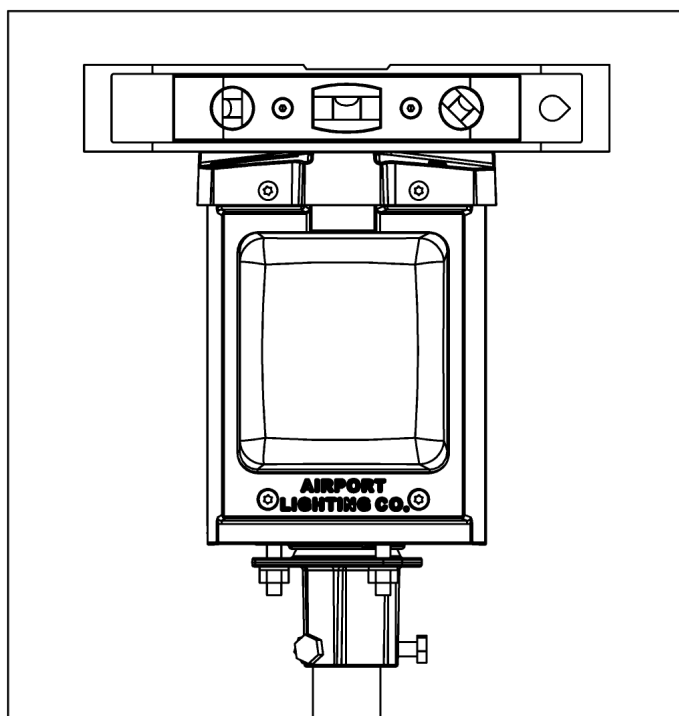


Figure 5: Leveling, Front View

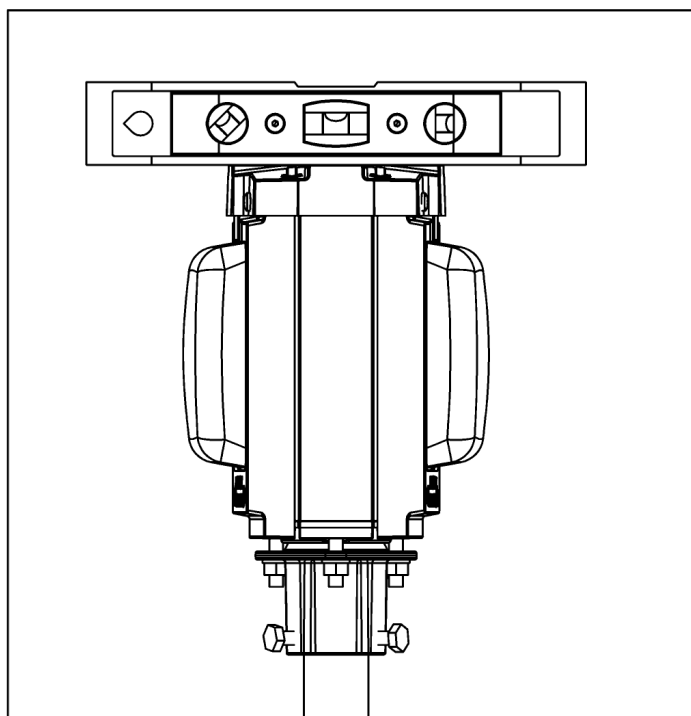


Figure 6: Leveling, Side View

## Torque Bolts

Once the fixture has been aimed and leveled, torque the  $\frac{1}{4}$ -20 fasteners to 64 inch-pounds (5.3 foot-pounds). Recheck the level of the fixture.

Table 2: Torque

|                     | Inch-pounds | Foot-pounds | Newton-meters |
|---------------------|-------------|-------------|---------------|
| #8                  | 18.4        | 1.5         | 2.1           |
| $\frac{1}{4}$ -20   | 63.6        | 5.3         | 7.2           |
| 1 $\frac{1}{2}$ & 2 | na          | 50          | 68            |



## Operation

The L862 LED product line is designed to work on a constant current electrical supply that delivers current from 2.8 amps to 6.6 amps. The fixture measures the input current and automatically adjusts the light intensity. The fixture contains an input board, a controller, and light engine(s). The fixture senses which color will be emitted by the light engine and adjusts its power accordingly. Change of light engine to a different color requires no user adjustments.

Inspect that the fixture is properly installed and connected to the correct isolation transformer. Turn on the fixture and the LEDs come on. Step the current level and the light intensity will adjust to the correct intensity. When stepping current, allow a few seconds for the intensity to readjust.

## Plug and Know LED Circuit

The ALC L-862 light engines use a 6-pin connector. 2 of the 6 pins provide power to the LEDs. The remaining 4 pins are used to identify the light engine. When a light engine is connected to the fixture, the fixture knows which light engine has been connected. This allows the circuit to properly drive each light engine to its correct intensity.

## Multiple Light Devices

The light engines are made up of multiple LEDs. FAA requires the fixture to shut off if 25% of the LEDs fail. The circuit is constantly looking at the LEDs. When 25% or more fail, the circuit will power down within 2 minutes and a minute later it will shut the fixture off. If the fixture is off, do not touch the fixture. There is still power going to the fixture. If a fixture appears to be off, cycle the power off and on. Observe the light engines. Replace the light engine that does not have all the LEDs working.

## Arctic Kit

The optional arctic kit operates in series with the L-862(L) fixture. A thermostat determines whether the arctic kit is needed. If the temperature is low, the thermostat sends power to the heater(s) and the glass lens is heated. If the temperature is high, the thermostat shorts and only the fixture sees power.



## Daily Maintenance

- Check that all lights are working.
- Check that all lights have similar light output.
- Check that the lenses are clean.

## Monthly Maintenance

- Check that all fixtures are aimed properly.
- Check that all fixtures are level on 2 axes.
- Check that the fixture is secure, and all fasteners are tight.
- Check that all LEDs are illuminated.
- Clean the lenses.

## Tech Support

Outside of aiming, leveling, and cleaning, the L-862 LED should require very little maintenance. The end user has the option to use this manual to perform advanced maintenance, to call tech support at Airport Lighting Company at (866) 212-1060 or to contact us by email at [support@airportlightingcompany.com](mailto:support@airportlightingcompany.com).


Tech support can provide the end user with an RMA, Return Merchandise Authorization number. Once the fixture has been evaluated by ALC, you will be either granted a warranty replacement, the option to repair the fixture or the option to purchase a new fixture.

**Table 3: Troubleshooting**

| Problem                                          | Cause                            | Solution                             |
|--------------------------------------------------|----------------------------------|--------------------------------------|
| <b>Light output too low</b>                      | Glass is dirty                   | Clean lens                           |
|                                                  | Wrong current level              | Check current on CCR                 |
|                                                  | Isolation transformer too small  | Install the proper sized transformer |
|                                                  | LED light engine is failing      | Replace light engine                 |
|                                                  | Controller is failing            | Replace controller                   |
| <b>Only one side of fixture has light output</b> | LED light engine is disconnected | Check light engine connection        |
|                                                  | LED light engine has failed      | Replace light engine                 |
|                                                  | Controller has failed            | Replace controller                   |
| <b>Both sides of fixture, no light output</b>    | Connection failed                | Check all connections                |
|                                                  | LED light engine(s) failed       | Replace light engine(s)              |
|                                                  | Controller failed                | Replace controller                   |
|                                                  | Power input board failed         | Replace power input board            |
|                                                  | Arctic Kit has open circuit      | Check arctic kit connections         |
| <b>Condensation inside lens</b>                  | Excess humidity                  | It will clear itself                 |


## Replacing Electronic Parts

When the light is out the cause can be in a few areas. The way to isolate the problem is to start with a known good fixture. Test each part from the inoperable fixture in the known good fixture, one at a time, until the problem is isolated. Then replace the defective part.

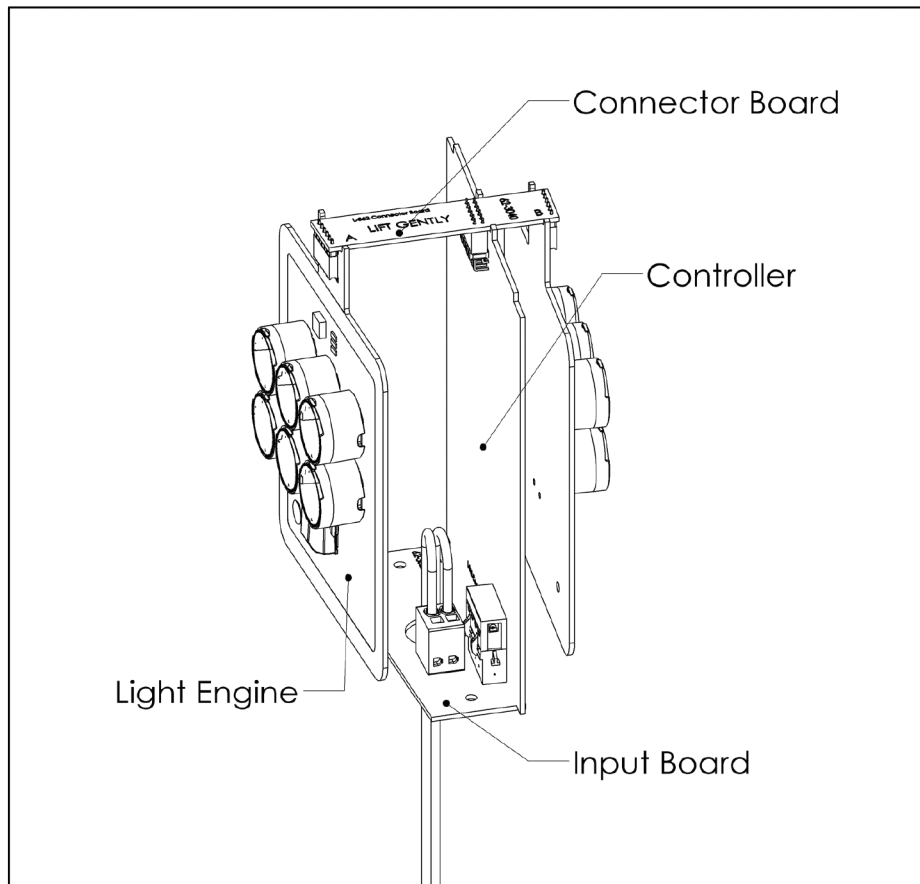

*Figure 7: Electronic Component Assembly*

- **Note which side is side A and which side is side B.**
- **Remove the 4 screws that hold the cap in place.**
- **Remove the cap.**
- **Carefully pull the connector board upward to disconnect.**
- **Remove the 2 screws that hold the side A lens retainer in place.**
- **Remove side A LED light engine.**
- **Remove the 2 screws that hold the Side B lens retainer in place.**
- **Remove side B LED light engine.**
- **Pull the connector board upward and out of the fixture.**
- **Remove the 4 screws holding the bottom to the body.**

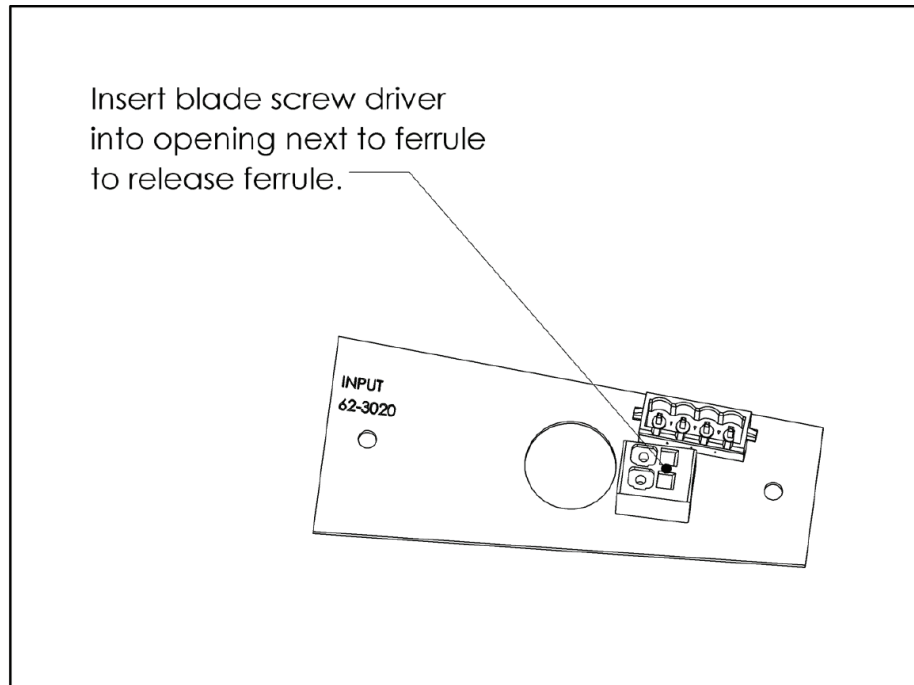


*Figure 8: How to Remove Ferrule*

- Insert a small blade screwdriver into the openings next to the ferrules to release the ferrules.
- Remove the 2 screws holding the input board to the bottom.

## Replacing Electronic Parts

- Connect the input board to the bottom with 2 screws.
- Push the ferrules into the input board terminal block until the ferrules are flush with the top of the terminal block.
- Position the controller board into the input board.
- Slide the controller board into the body. Make sure the board is in the grooves correctly.
- Connect the bottom to the body with 4 screws.
- Install the connector board to the controller.
- Use the cap to determine Side A and Side B.
- Slide Side A light engine into the connector board.
- Place the lens retainer over the light engine.
- Make sure the top edges are flush.
- Install the 2 lower screws.
- Slide Side B light engine into the connector board.
- Place the retainer over the light engine.
- Make sure the top edges are flush.
- Install the 2 lower screws.
- Place the cap in position and apply a downward pressure while installing 4 screws.

## Replacing Lens, Gasket, and Light Engine

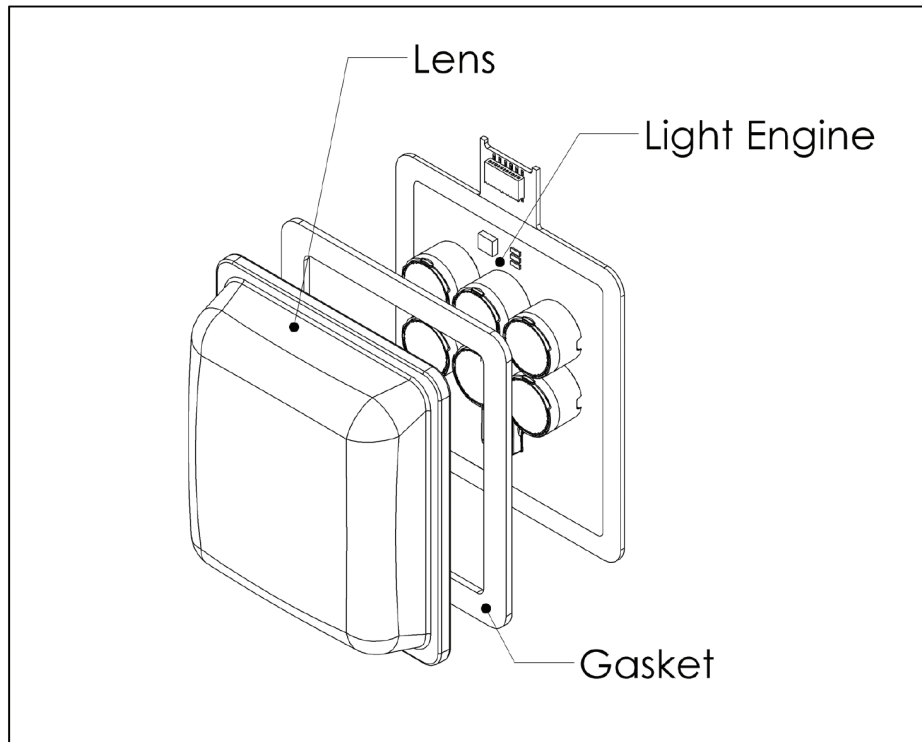

**Figure 9: Lens Assembly**

It is recommended to purchase the light engine as an assembly with a new glass lens. If the lens is broken and the light engine still works properly, the glass lens can be replaced. And if the lens is good, the light engine can be replaced.

- **Replacing the Light Engine, Lens and Gasket**
- **Cut the gasket with a box cutter.**
- **Separate the two parts.**
- **Peel the gasket off the parts that are going to be reused.**
- **Use an adhesive cleaner to remove any remaining adhesive.**  
(Goo Gone, or De-Solv-It work well)
- **Use alcohol to clean the surface for the new gasket.**
- **Clean the lens.**
- **Peel and stick the new gasket to the lens.**
- **Peel and stick the gasket and lens to the light engine.**

## High Intensity Runway Light LED Light Engines

There are 5 different light engines to choose from. There is 1 white, 1 yellow, 1 red and 2 green light engines. Each light engine meets a specification or multiple specifications. All specifications are met when the fixture is aimed properly. Table 4 shows the available light engines. All light engines work on either side of a fixture.

**Table 4: Light Engines**

| Color  | Order Code | Light Engine w/ Lens | Light Engines | LEDs | FAA           | ICAO                                                                |
|--------|------------|----------------------|---------------|------|---------------|---------------------------------------------------------------------|
| White  | W          | 262-1200             | 62-3030       | 7    | L862          | A2-10<br>Runway Edge Light to 60m wide                              |
| Yellow | Y          | 262-1201             | 62-3031       | 7    | L862          | A2-10<br>Runway Edge Light to 60m wide                              |
| Red    | R          | 262-1202             | 62-3032       | 7    | L862<br>L862E | A2-10<br>A2-8<br>Runway Edge Light to 60m wide.<br>Runway End Light |
| Green  | G          | 262-1203             | 62-3033       | 4    | L862<br>L862E |                                                                     |
| Green  | I          | 262-1204             | 62-3034       | 9    |               | A2-3<br>Threshold Light                                             |

## Column and Cords Part Numbers

**Table 5: Columns and Cords**

| Fixture Height   | Column Part Number | Cord PN  |
|------------------|--------------------|----------|
| 14 inches (36cm) | 77                 | 262-1200 |
| 20 inches (51cm) | 78                 | 262-1201 |
| 24 inches (61cm) | 78-16              | 262-1202 |
| 30 inches (76cm) | 79                 | 262-1203 |

## Parts Diagram

| Item | Part Number                   | Qty.   |
|------|-------------------------------|--------|
| 1    | 262-1300 L862 Cap             | 1      |
| 2    | 62-1010, L862 Body            | 1      |
| 3    | 62-3040, L862 Connector Board | 1      |
| 4    | 62-3010, L862 Controller      | 1      |
| 5    | 62-3020, L862 Input Board     | 1      |
| 6    | 62-1040, L862 Bottom          | 1      |
| 7    | 62-1050, L862 Slip Fitter     | 1      |
| 8    | Column (see table)            | 1      |
| 9    | 62-1060, Hex Coupling         | 1      |
| 10   | 62-1030, L862 Retainer        | 1 or 2 |
| 11   | 62-1070, L862 LED Lens        | 1 or 2 |
| 12   | 62-2020, Lens Gasket          | 1 or 2 |
| 13   | Light Engine (see table)      | 1 or 2 |
| 14   | 99-00109, Strain Relief       | 1      |
| 15   | 99-00244, #8 Torx T20         | 12     |


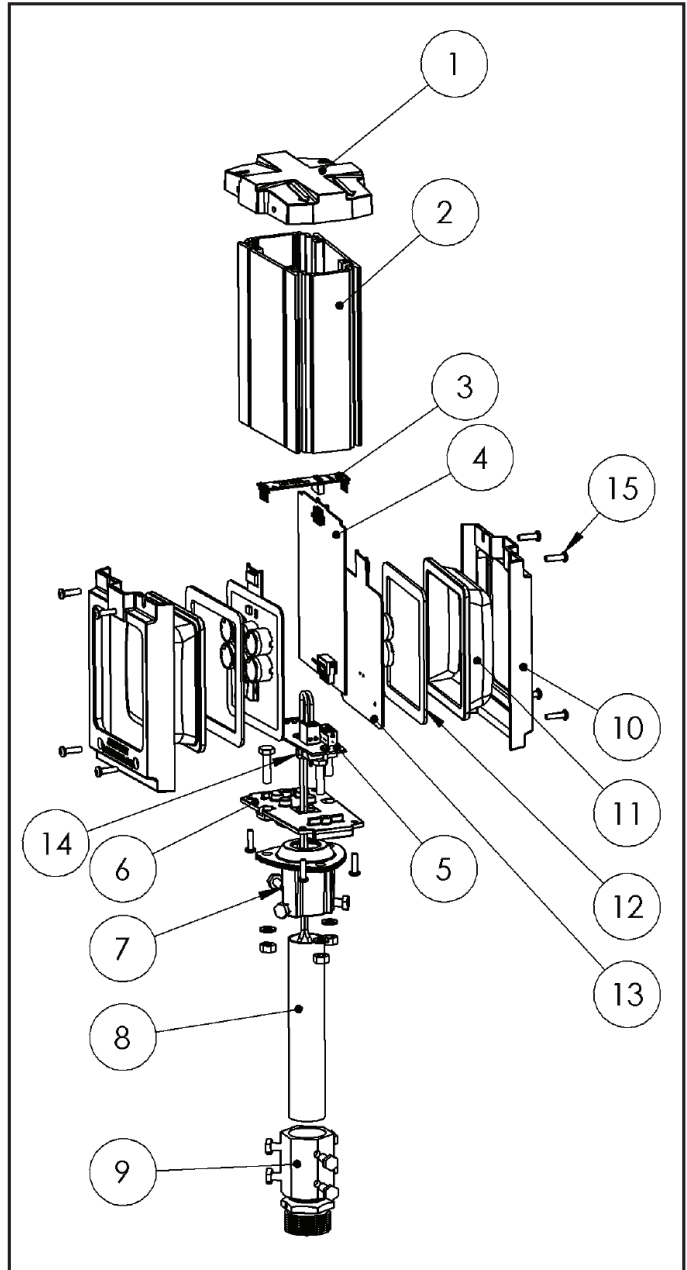


Figure 10: Parts Diagram



## Arctic Kit Parts

| Item | Part Number | Description          |
|------|-------------|----------------------|
| 1    | 62-3025     | PCB AK Input Board   |
| 2    | 62-3050     | PCB Thermostat Board |
| 3    | 62-3060     | Heater               |

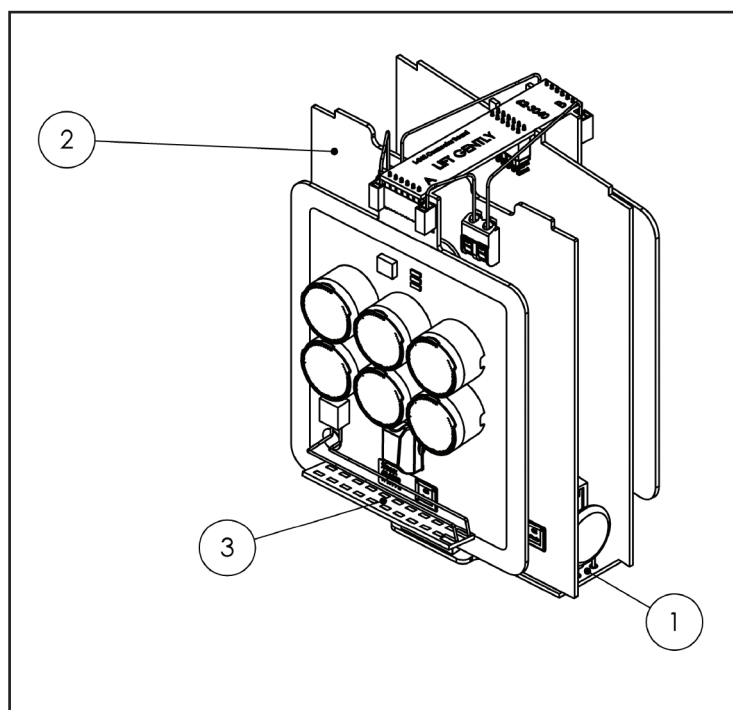

**Figure 11: Arctic Kit Parts**

**Table 6: Bill of Materials**

| Part Number | Name                               | Description                                    |
|-------------|------------------------------------|------------------------------------------------|
| 62-1010     | L862 Body                          | Extrusion body                                 |
| 262-1300    | Cap w/ Gaskets                     | Die cast cap                                   |
| 62-1030     | L862 Retainer Yellow               | Die cast yellow lens retainer                  |
| 62-1031     | L862 Retainer Red                  | Die cast red lens retainer                     |
| 62-1032     | L862 Retainer Green                | Die cast green lens retainer                   |
| 62-1033     | L862 Retainer Blank                | Solid retainer, obscure side of unidirectional |
| 62-1040     | L862 Bottom                        | Die cast bottom                                |
| 62-1050     | L862 Slip Fitter                   | Die cast slip fitter                           |
| 62-1060     | Hex Coupling                       | Frangible coupling                             |
| 62-1070     | Lens                               | Glass lens                                     |
| 62-2020     | Lens Gasket                        | Gasket                                         |
| 62-3010     | PCB Controller                     | PCB controls unit                              |
| 62-3020     | PCB Input Board                    | PCB input connection                           |
| 62-3025     | PCB AK Input Board                 | PCB input connection (arctic kit option)       |
| 62-3040     | PCB Connector Board                | PCB connects light engines to controller       |
| 62-3030     | PCB Light Engine White             | White 7 LED light engine with optics           |
| 62-3031     | PCB Light Engine Yellow            | Yellow 7 LED light engine with optics          |
| 62-3032     | PCB Light Engine Red               | Red 7 LED light engine with optics             |
| 62-3033     | PCB Light Engine Green             | Green 4 LED light engine with optics           |
| 62-3034     | PCB Light Engine, ICAO Threshold   | Green 9 LED light engine with optics           |
| 62-3050     | PCB Thermostat Board               | Thermostat board (arctic kit option)           |
| 62-3060     | PCB Heater Board                   | Heater (arctic kit option)                     |
| 262-1200    | Light Engine Ass'y, White          | White 7 LED light engine with lens and gasket  |
| 262-1201    | Light Engine Ass'y, Yellow         | Yellow 7 LED light engine with lens and gasket |
| 262-1202    | Light Engine Ass'y, Red L862       | Red 7 LED light engine with lens and gasket    |
| 262-1203    | Light Engine Ass'y, Green L862     | Green 4 LED light engine with lens and gasket  |
| 262-1204    | Light Engine Ass'y, ICAO Threshold | Green 9 LED light engine with lens and gasket  |
| 262-1100    | L862(L) Cord Set, 14" OAH          | L-823, Style 6 for 14" (36cm) EHL Fixture      |
| 262-1101    | L862(L) Cord Set, 20" OAH          | L-823, Style 6 for 20" (51cm) EHL Fixture      |
| 262-1102    | L862(L) Cord Set, 24" OAH          | L-823, Style 6 for 24" (61cm) EHL Fixture      |
| 262-1103    | L862(L) Cord Set, 30" OAH          | L-823, Style 6 for 30" (76cm) EHL Fixture      |
| 77          | Column for 14                      | Column for 14 (36cm)                           |
| 78          | Column for 20                      | Column for 20 (51cm)                           |
| 78-16       | Column for 24                      | Column for 24 (61cm)                           |
| 79          | Column for 30                      | Column for 30 (76cm)                           |
| 99-00244    | 8-32 x 5/8 Torx Pan Taplite SS     | Hardware, T20                                  |
| 903         | Thread Reducer                     | 2" NPT to 1 1/2-12 NF thread reducer           |

**Table 7: Arctic Kit Bill of Materials**

| Part Number | Name                               | Description                                    |
|-------------|------------------------------------|------------------------------------------------|
| 62-3025     | PCB AK Input Board                 | Input Board                                    |
| 62-3130     | PCB Light Engine White             | White light engine                             |
| 62-3131     | PCB Light Engine Yellow            | Yellow light engine                            |
| 62-3132     | PCB Light Engine Red               | Red light engine                               |
| 62-3133     | PCB Light Engine Green             | Green L-862 Light engine                       |
| 62-1033     | L862 Retainer Blank                | Solid retainer, obscure side of unidirectional |
| 62-3134     | PCB Light Engine ICAO Threshold    | ICAO green threshold light engine              |
| 62-3050     | PCB Thermostat Board               | Thermostat board                               |
| 62-3060     | PCB Heater Board                   | Heater                                         |
| 62-3065     | Heater Tape                        | Heater tape                                    |
| 262-1210    | Light Engine Ass'y, White          | White lens and light engine                    |
| 262-1211    | Light Engine Ass'y, Yellow         | Yellow lens and light engine                   |
| 262-1212    | Light Engine Ass'y, Red            | Red lens and light engine                      |
| 262-1213    | Light Engine Ass'y, Green          | Green lens and light engine                    |
| 262-1214    | Light Engine Ass'y, ICAO Threshold | ICAO green lens and light engine               |



# WIRING DIAGRAM



An ISO 9001:2015 Certified Company

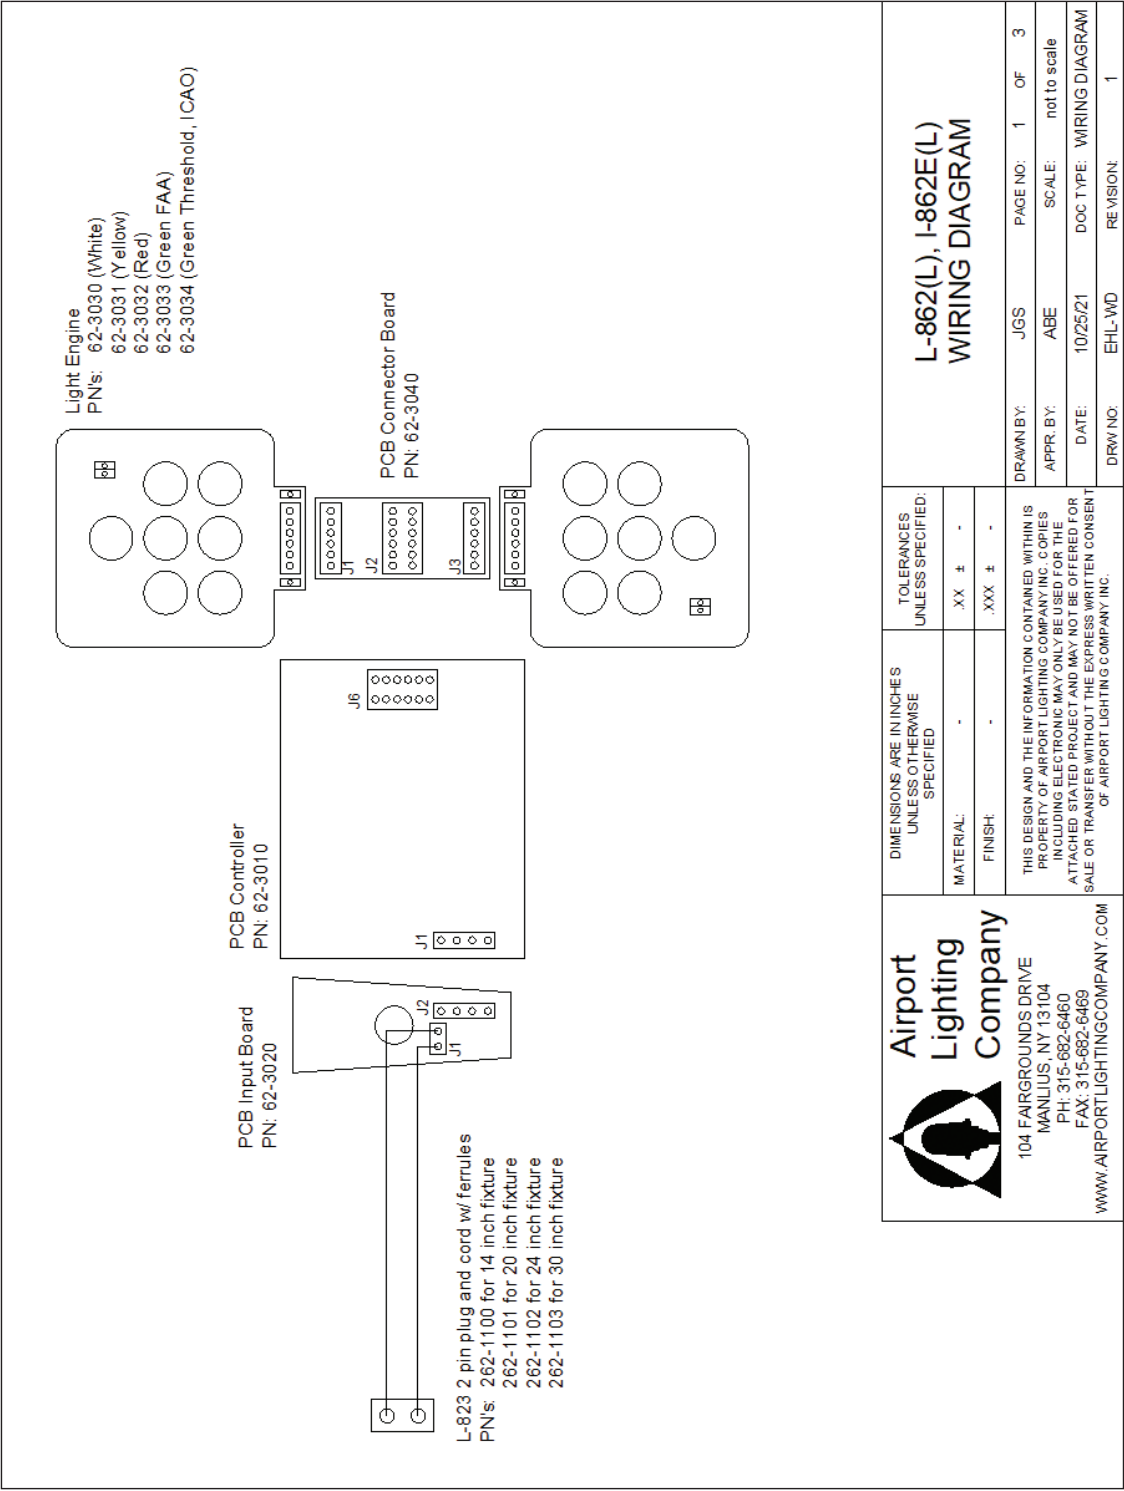


Figure 12: Schematic, Bi-directional Fixture



# WIRING DIAGRAM



AirportLightingCompany  
An ISO 9001:2015 Certified Company

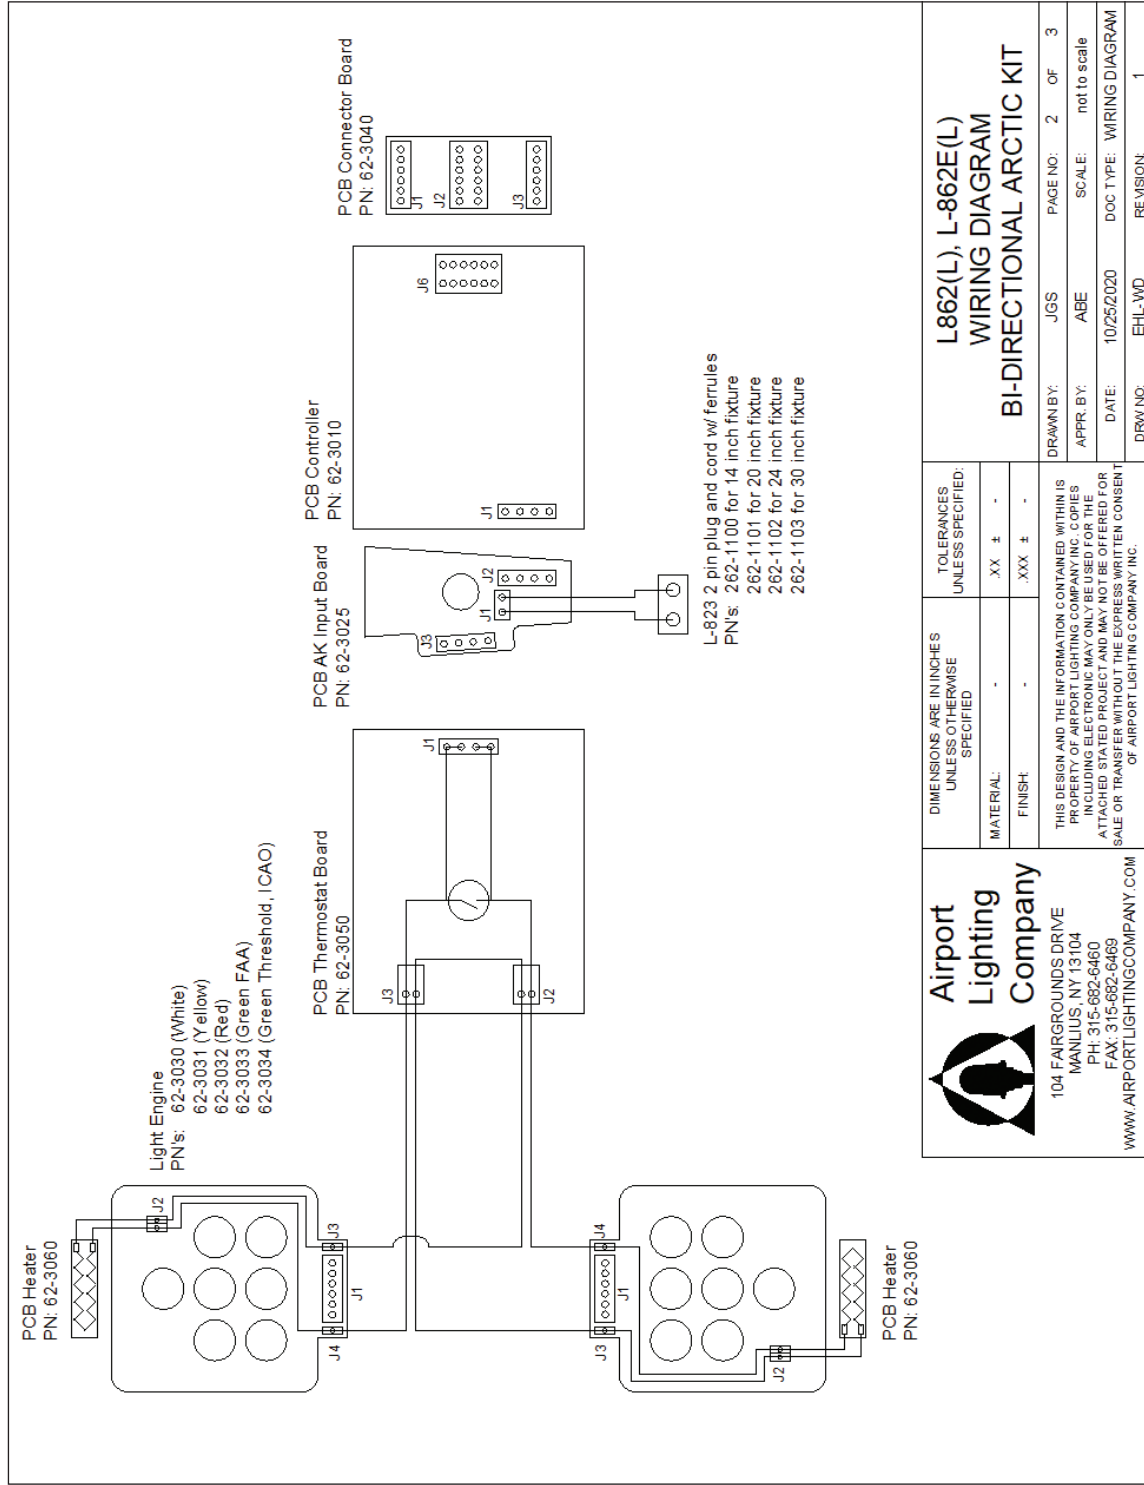


Figure 13: Schematic, Bi-directional Arctic Kit



# WIRING DIAGRAM

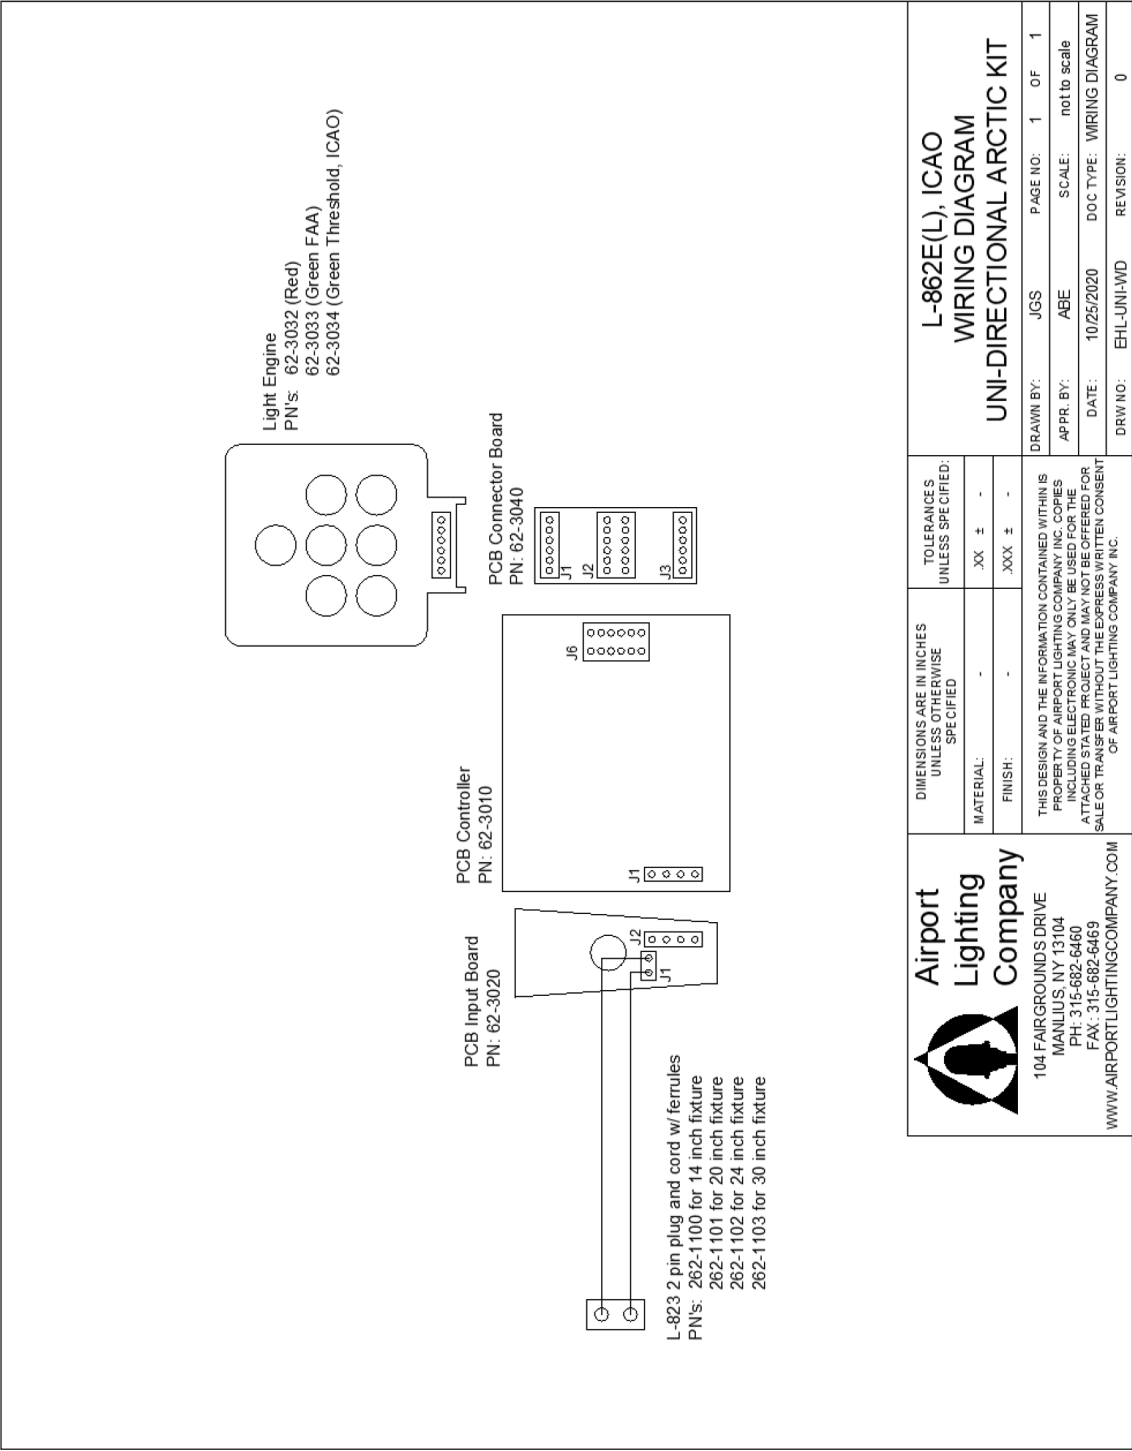


Figure 14: Schematic, Uni-directional Arctic Kit



# WIRING DIAGRAM



An ISO 9001:2015 Certified Company

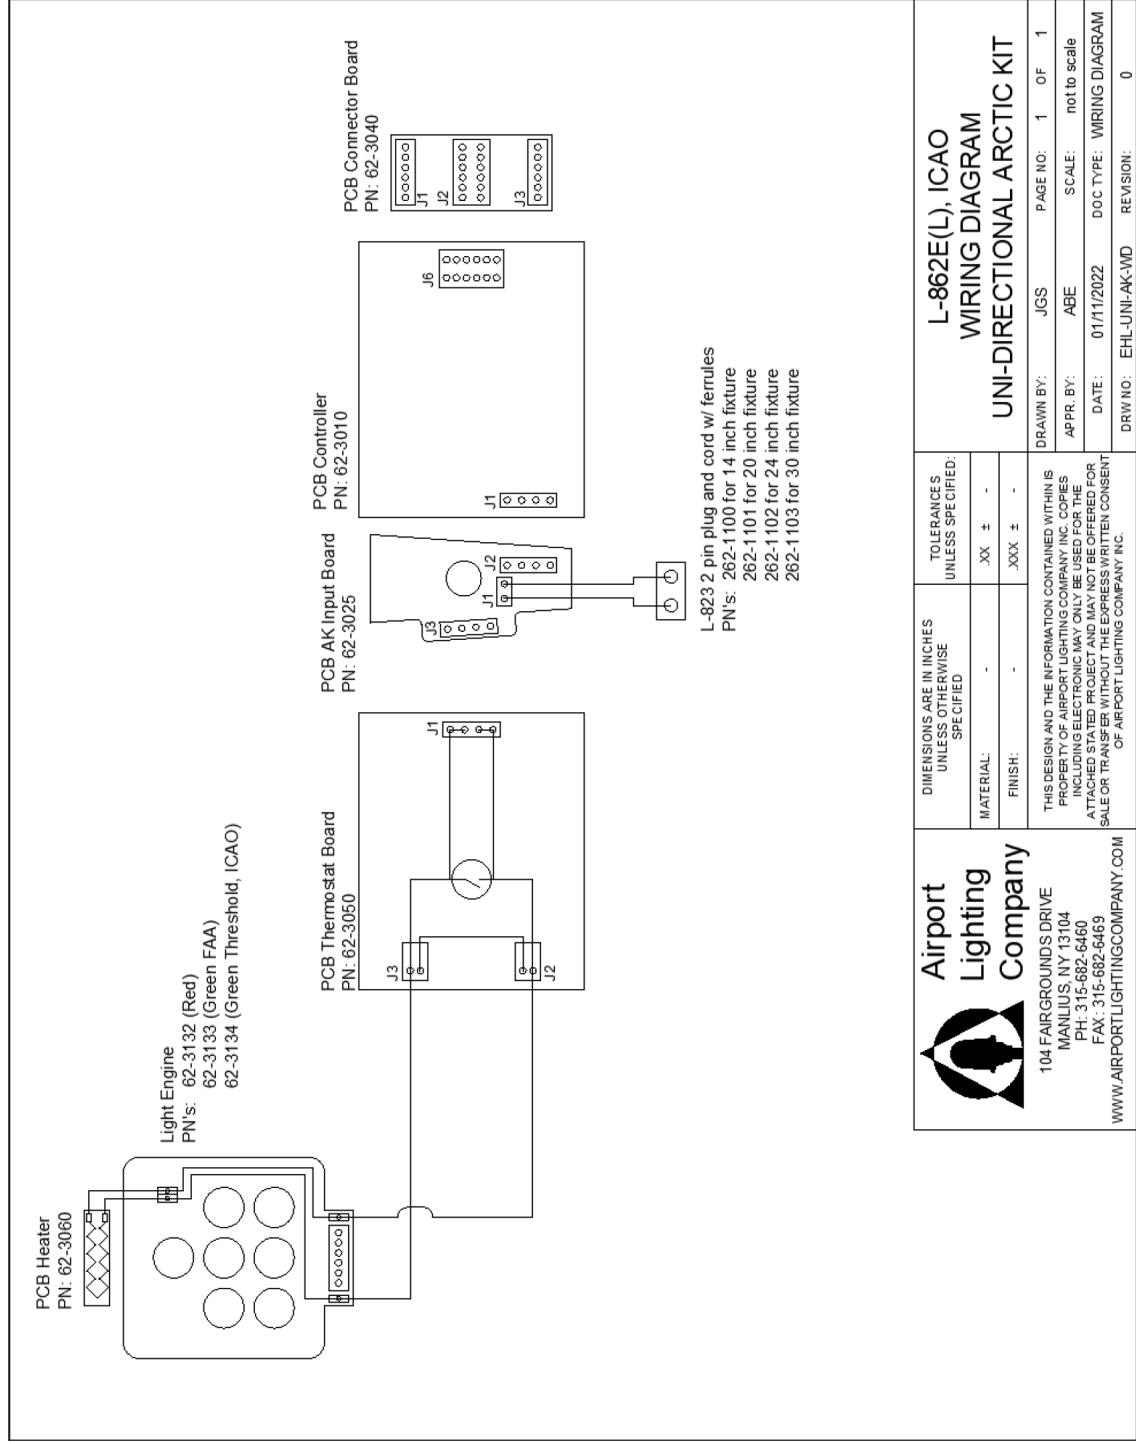


Figure 15: Schematic, Uni-directional with Arctic Kit

An ISO 9001:2015 Certified Company

[illegible]